

Programming Remote Control

Your remote control can handle several devices. However, first you have to set up your remote control for your equipment. You can do it in one of the following ways:

Brand Setup

First, find the manufacturer of your equipment on the Brand Codes list. If the manufacturer's brand is not listed, go to **Automatic Search** below. To set up your remote control follow these steps:

- Turn the device on.
- Press **TV** / **AUD** / **DVD** / **AUX** / **STB** depending on what mode you want to handle and then hold ^{OK} until the device key blinks twice.
- Enter one of the codes from the list. If the code was correct the mode key blinks twice. If not, the key emits one long blink. Then, you will have to repeat steps 2 and 3 until entering the correct code.
- Press ^{MEMO}. If the device has turned off, you have chosen the right code. If none of the codes work, try **Automatic Search**.

Automatic Search

Automatic Search should only be undertaken if none of the brand codes works or your brand name is not listed. Use the **Automatic Search** option.

- Switch on your device. Then press appropriate mode key, for example **TV** if you want to set up a TV.
- Press and hold ^{OK} until the mode key blinks twice.
- Press **9** **9** **1** . The mode key blinks twice.
- Aim the remote at the device and press ^{MEMO}.
- Press [▲] / [▼] repeatedly until the device is switched off.
- Press ^{MEMO} to turn the TV on.
- Next, press ^{OK} to store the code for your device. The mode key blinks twice. Your remote control is now programmed to operate your TV set.

- To search codes for other devices repeat steps 1 through 7, but substitute the **TV** key with the appropriate one for the mode you are searching for.

Finding Your Code

If you want to know what code operates your device, you can obtain it with the **Device Code** option. To find out the code, follow these instructions:

 
- Switch on your device. Then press appropriate mode key, for example **TV** if you want to set up a TV.
- Press and hold ^{OK} until the mode key blinks twice.
- Press **9** **9** **0** . The mode key blinks twice.
- For the first digit of your code, press **1** and count the number of times the key blinks (e.g. 2 blinks = 2). If the light does not blink, the digit is 0. For the second digit press **2** and count the number of blinks. Do the same for the remaining digits.

- To check for other device codes, repeat the above steps, but substitute the **TV** key with the appropriate one for the device you are checking.

Using Learning

Your remote control includes a learning feature. It means you can transfer some unique functions from the remote control of other device to this remote control.

- Press ^{OK} until the last selected mode key blinks twice. Then press **9** **7** **5** .
- Press the mode key. For example to transfer a function from DVD remote control press ^{MEMO}.
- Press the key on which the function will be stored.
- Place your remote control and the device remote control (e.g. your DVD remote control) head-to-head, about 5 centimeters / 2 inches apart.



- On the device remote, press and hold the key to be learned. The target remote control will blink rapidly and turn off. Keep holding the key on the device remote control until the device key on the target remote blinks twice.
- If the learning failed, the device key emits one long blink. You will have to repeat step 5.

Deleting a Single Learning Key

Once you used a particular key to store a new function on it, you may restore the original function of the key.

- Press ^{OK} until the last selected mode key blinks twice. Then press **9** **7** **6** .
- Press the mode key (for example ^{MEMO}). The mode key blinks twice.
- Press the key containing the learned function. The mode key blinks twice.
- Press and hold ^{OK} to exit programming.

Deleting All Learned Keys

- Press ^{OK} until the last selected mode key blinks twice. Then press **9** **7** **6** .
- Press the mode key twice (for example ^{MEMO}). All the learned keys for this mode will be cleared. The mode key blinks twice.
- Press and hold ^{OK} to exit programming.

Using the Master Power Key

Your remote has a feature that enables you to sequentially turn up to five devices on and off with a single key press. This functionality works only if the remote control is in STB mode.

- Press ^{OK} until the last selected mode key blinks twice.
- Press **9** **9** **5** . The last selected mode key will blink twice.
- Press ^{MEMO}.
- Press the mode key for the device you would like to turn on first and press ^{MEMO}. Then press the mode key for the second device to turn on and once again ^{MEMO}. Repeat the steps until adding all the devices you want to be operated.
- To save settings press ^{STB}.
- Next press ^{OK} to exit programming.

Volume Lock

The remote control enables you to control volume level of different devices without selecting the mode key for each device. For example: if you are watching a film on your DVD player, you can adjust the volume for your TV set, without pressing the TV mode key on your remote control.

To set the Volume Lock for your TV:

- Press and hold ^{OK} until the last selected mode key blinks twice.
- Press **9** **9** **3** . The last selected mode key will blink twice.
- Then press **TV** and the device key blinks twice.

Deleting “Volume Lock” for a particular device (for example for DVD)

- Press ^{MEMO} once.
- Press and hold down the ^{OK} key until the mode key blinks twice.
- Press **9** **9** **3** . The mode key blinks twice.
- Then press the [▼] key and the mode key will blink four times.

Now being in DVD mode, you will be able to control VOL+/- or MUTE functions of your DVD only (provided it has volume control).

Deleting „Volume Lock” for all devices

- Press and hold ^{OK} until the last selected mode key blinks twice.
- Press **9** **9** **3** .
- Press the [▲] key and the the last selected mode key will blink four times.

Clearing Custom Programming

You may clear the custom programming and revert to the default settings of the remote control. To do that, follow these steps:

- Press ^{OK} until the last selected mode key blinks twice.
- Enter **9** **8** **0** . The last selected mode key blinks twice, pauses, and blinks twice again.

This procedure does not affect your setup codes. They remain in memory of the remote control.

Troubleshooting

Problem	Solution
Device key does not blink when you press a key.	Replace the batteries with two (2) new AA batteries.
Device key blinks when you press a key, but home entertainment device does not respond.	Make sure you are aiming the remote control at your home entertainment device and that you are within 4.5 meters / 15 feet of the device you are trying to control.
The remote control does not control home entertainment devices or commands are not performing properly.	Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.
TV/VCR Combo does not respond properly.	Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.

PLAY and STOP keys do not work on a Motorola DCT-2000 cable converter.

Tried Search Method and still could not find a working code.

- Press and hold ^{OK} until device key blinks twice.
- Enter **9** **9** **2** .
- Press and release the device key to be cleared twice.

Remote control does not turn on Sony or Sharp TV/VCR Combo.

For power on, these products require programming TV codes on the remote control. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.



Brand Codes

The following codes are used when configuring the remote control. First find the manufacturer of your equipment and then try the codes one by one.

Audio Amplifiers

Adcom	0577, 1100
Bose	0674
Durabrand	1561
Elan	0647
GE	0078
Harman/ Kardon	0892
JVC	0331
Left Coast	0892
Lennox	1561
Luxman	0165
Marantz	0892,0321
McIntosh	0251
Nakamichi	0321
NEC	0264
Optimus	0395,0823
Parasound	0246
Philips	0892
Pioneer	0823
Polk Audio	0892
RCA	0823
Realistic	0395
Sansui	0321
Shure	0264
Sony	0689,0815,1126
Soundesign	0670
Victor	0331
Wards	0078,0211
Yamaha	0354,0133

Pioneer	1023, 0014, 0080, 0150, 0244, 0531, 0630, 1384
Polaroid	1508
Polk Audio	0189, 1289, 1414
Proscan	1254
RCA	1023, 1609, 1254, 0080, 0531, 1074, 1390, 1511
Rio	1869
Samsung	1295, 1500
Sansui	0189
Sanyo	1073, 1077, 1158
Sharp	0186, 1286
Sharper Image	1556
Sherwood	1077, 1517, 1653
Sirius	1627, 1811, 1987
Sonic Blue	1532, 1869
Sony	1058, 1441, 1258, 1759, 1622, 0474, 1349, 1406, 1442, 1558, 1658, 1758, 1858
Soundesign	0670
Stereo-phonics	1023
Sunfire	1313
Teac	1074, 1390, 1528
Technics	1308, 1518, 0309
Thorens	1189
Toshiba	1788
Venturer	1390
Wards	0189, 0014, 0080
XM	1406, 1414
Yamaha	0176, 0186, 1176, 1276, 1331, 1375
Zenith	0857, 1293

Soundesign	0078, 0211
Victor	0331
Wards	0078, 0211
Yamaha	0354, 0133

Audio Receivers

ADC	0531
Aiwa	1405, 0189, 0121, 0405, 1243, 1388, 1641
Akai	1512
Alco	1390
Amphion Media Works	1563, 1615
AMW	1563, 1615
Anam	1609, 1074
Apex Digital	1257, 1440, 1774
Arcam	1120
Audiotronic	1189
Audiovox	1390, 1627
B & K	0701, 0820, 0840
BK	0702
Bose	1229, 1629, 1841, 1933
Cambridge Soundworks	1370
Capetronic	0531
Carver	1189, 0189
Classic	1352
Coby	1389
Curtis Mathes0080	1250
Daewoo	1250
Delphi	1414
Denon	1360, 0004, 1142
Fisher	1801
Gateway	1517
Go Video	1532
Harman/ Kardon	0110, 0189, 0891, 1304, 1306
Hitachi	1801
Integra	0135, 1298, 1320
JBL	0110, 1306
JVC	1374, 1495, 1811, 1871
Kenwood	1313, 1570, 1569, 0186
KLH	1390, 1412, 1428
Koss	1366, 1497
Lasonic	1798
LG	1293
Linn	0189
Liquid Video	1497
Magnavox	1189, 1269, 0189, 0391, 0531, 1514
Marantz	1189, 1269, 0189, 1289
Mitsubishi	1393
Norcent	1389
Nova	1389
Onkyo	0135, 0842, 1298, 1320, 1531
Optimus	1023, 0080, 0186, 0531, 0670, 1074
Oritron	1366, 1497
Parasonic	1308, 1518, 0309, 0367, 1288, 1316, 1548, 1633, 1763, 1764
Philips	1189, 1269, 0189, 0391, 1120, 1266

Daewoo	0784, 0705, 0833, 0869, 1169, 1172, 1234, 1242, 1441, 1443
Denon	0490, 0634
Desay	1407, 1455
Diamond Vision	1316, 1609, 1610
Disney	0675, 1270
Dual	1068, 1085
Durabrand	1127
DVDM2000	0521
EMerson	0591, 0675, 0821, 1268
Enterprise	0591
ESA	0821, 1268, 1443
Fisher	0670, 1919
Funai	0675, 1268, 1334
Gateway	1073, 1077, 1158
GE	0522, 0815, 0717
Go Video	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1443, 1730
Go Vision	1071, 1072
GoldStar	0741
GPX	0699, 0769
Greenhill	0717
Harman/ Kardon	0582, 0702
Hitachi	0573, 0664, 1247, 1919
Hiteker	0672
ilo	1348, 1472
Initial	0717, 1472
Innovative Technology	1542
Insignia	1268
Integra	0627
Jaton	1078
JBL	0702
Jensen	1016
JSI	1423
JVC	0558, 0623, 0867, 1164, 1271, 1602, 1863
JWin	1049, 1051
Kawasaki	0790
Kenwood	0490, 0534, 0682, 0737
KLH	0717, 0790, 1020, 1149, 1261
Konka	0711, 0719, 0720, 0721
Koss	0651, 0896, 1423
Kreisen	1421
Landel	0826
Lasonic	0498, 1173
Lennox	1127
LG	0591, 0741, 0801, 0869, 1526

Go Video	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1443, 1730
Go Vision	1071, 1072
GoldStar	0741
GPX	0699, 0769
Greenhill	0717
Harman/ Kardon	0582, 0702
Hitachi	0573, 0664, 1247, 1919
Hiteker	0672
ilo	1348, 1472
Initial	0717, 1472
Innovative Technology	1542
Insignia	1268
Integra	0627
Jaton	1078
JBL	0702
Jensen	1016
JSI	1423
JVC	0558, 0623, 0867, 1164, 1271, 1602, 1863
JWin	1049, 1051
Kawasaki	0790
Kenwood	0490, 0534, 0682, 0737
KLH	0717, 0790, 1020, 1149, 1261
Konka	0711, 0719, 0720, 0721
Koss	0651, 0896, 1423
Kreisen	1421
Landel	0826
Lasonic	0498, 1173
Lennox	1127
LG	0591, 0741, 0801, 0869, 1526

Go Vision	1071, 1072
GoldStar	0741
GPX	0699, 0769
Greenhill	0717
Harman/ Kardon	0582, 0702
Hitachi	0573, 0664, 1247, 1919
Hiteker	0672
ilo	1348, 1472
Initial	0717, 1472
Innovative Technology	1542
Insignia	1268
Integra	0627
Jaton	1078
JBL	0702
Jensen	1016
JSI	1423
JVC	0558, 0623, 0867, 1164, 1271, 1602, 1863
JWin	1049, 1051
Kawasaki	0790
Kenwood	0490, 0534, 0682, 0737
KLH	0717, 0790, 1020, 1149, 1261
Konka	0711, 0719, 0720, 0721
Koss	0651, 0896, 1423
Kreisen	1421
Landel	0826
Lasonic	0498, 1173
Len	

Toshiba	0154, 1256, 0156, 1265, 0060, 1945, 1935, 1704, 1656, 1635, 1356, 1343, 1325, 1306, 1156, 0845, 0832, 0650, 0149, 0036
Tosonic	0185
Totelevision	0039
Trical	0157
TVS	0463
Ultra	0391, 1323
Universal	0027
Universum	1337
US Logic	1286, 1303
Vector Research	0030
Victor	0053
Video Concepts	0098
Vidikron	0054, 0242, 1398
Vidtech	0178, 0019, 0036
Viewsonic	0797, 0857, 0864, 0885, 1330, 1342, 1578, 1627, 1755
Viking	0046, 0312
Viore	1207
Visart	1336
Vizio	0864, 0885, 1499, 1756, 1758

Wards	0054, 0178, 0030, 1156, 0866, 0202, 0179, 0174, 0165, 0111, 0096, 0080, 0056, 0029, 0028, 0027, 0021, 0020, 0019, 0016
Waycon	0156
Westing-house	0885, 0889, 0890, 1282, 1571
White Westing-house	0463, 0623
Wyse	1365
Yamaha	0030, 0019, 0769, 0797, 0833, 0839
Zenith	0017, 0463, 1265, 0178, 0092, 0016

Zonda	0003
Hewlett Packard	1494
HP	1494
LG	1265
Magnavox	1525
Mitsubishi	1250
Optoma	0887
Panasonic	1291
RCA	1447
Samsung	0812, 1060, 1312
SVA	0872
Toshiba	1265, 1306
Vizio	1499

TVs (DLP)

Hewlett Packard	1494
HP	1494
LG	1265
Magnavox	1525
Mitsubishi	1250
Optoma	0887
Panasonic	1291
RCA	1447
Samsung	0812, 1060, 1312
SVA	0872
Toshiba	1265, 1306
Vizio	1499

TVs (HDTV)

Advent	0842
Hitachi	1960
Marantz	0854
Mitsubishi	0150
Panasonic	0250, 0650, 1291
Pioneer	0679
Princeton	0717
RCA	1447
Samsung	0812, 0702
Sharp	0688, 0689
Toshiba	1256

TVs (LCD)

Accurian	1803
Action	0873
Akai	1935
AOC	1365
Apex Digital	0890, 1217
Astar	1548
Audiovox	0180, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952
BenQ	1315
Byd:sign	1309, 1311
Cadia	1283
CyberHome	0794
Dell	1080, 1178, 1264
Emprex	1422, 1546
Envision	0813, 1365
FlexVision	0710
Funai	0171
Go Video	0886
Hannspree	1348, 1351
Hewlett Packard	1088

HP	1088
Hyundai	0849, 1219, 1294
iLo	1286, 1603, 1990
Initial	1603, 1990
Insignia	1204, 1517, 2002
Jensen	1299
Kost	1262
LG	0856, 1178, 1993
Magnavox	1454, 0802, 1198
Marantz	0855
Maxent	0762, 1211
Mintek	1603, 1990
Mitsubishi	1250
NetTV	0762
Norcent	1365, 1589, 1591
Norwood Micro	1286, 1296
Olevia	1144, 1240, 1331, 1610
Panasonic	0650, 1941
Petters	1523
Philips	1454, 1483
Polaroid	1262, 1276, 1316, 1341, 1498, 1523
Protron	1320, 1323
Proview	1401
RCA	0047, 1958
Sampo	0762
Samsung	0812, 0766, 0814, 1395, 1575
Sansui	1409
Sanyo	1142
Sceptre	0878, 1217, 1360, 1599
Sharp	0093, 0818, 1602
Sherwood	1399
Signet	1262
Sony	0810
Sova	1320
Soyo	1520
Superscan	0864
SVA	0587, 0870, 0871
Sylvania	0171, 1271
Symphonic	0171
Syntax	1144, 1240, 1331
Tatung	1286
Techview	0847
Toshiba	0845, 1343, 1635, 1656
Ultra	1323
US Logic	1286
Vidikron	1398
Viewsonic	0857, 0864, 0885, 1330, 1578, 1627
Visart	1336
Vizio	0864, 0885, 1756
Westing-house	0885, 0889, 0890, 1282, 1577
Wyse	1365
Zenith	1265

TV/DVD Combos

Controlled by the TV

Accurian	1803
Advent	1933
Akai	1935
Apex Digital	1943
Audiovox	1937, 1951, 1952
Axion	1937
Broksonic	1935
Cinego	1986
Diamond Vision	1997
Emerson	1963
ESA	1963
Funai	1963
Hitachi	1960
iLo	1990
Initial	1990
Insignia	1963, 2002
Jensen	1933
KLH	1962
LG	1993
Magnavox	1963
Mintek	1990
Panasonic	1941
Polaroid	1991
Prima	1933
RCA	1948, 1958, 2002
Samsung	1903
Sansui	1935
Sova	1952
Sylvania	1963
Toshiba	1635, 1935

Controlled by the DVD

Advent	1016
Akai	0695
Apex Digital	0830
Audiovox	1071, 1121, 1122
Axion	1071
Broksonic	0695

Cinego	1399
Diamond Vision	1610
Emerson	0675, 1268
ESA	1268
Funai	1268
Go Vision	1071
Hitachi	1247
iLo	1472
Initial	1472
Insignia	1268
Jensen	1016
KLH	1261
Konka	0719, 0720
LG	1526
Magnavox	1268
Mintek	1472
Panasonic	1490
Philips	0854, 1260
Polaroid	1480
Prima	1016
RCA	1022, 1193
Samsung	0899
Sansui	0695
Sova	1122
Sylvania	0675, 1268
Toshiba	0695

HP	0154, 1256, 0156, 1265, 0060, 1945, 1935, 1704, 1656, 1635, 1356, 1343, 1325, 1306, 1156, 0845, 0832, 0650, 0149, 0036
HP	1088
Hyundai	0849, 1219, 1294
iLo	1286, 1603, 1990
Initial	1603, 1990
Insignia	1204, 1517, 2002
Jensen	1299
Kost	1262
LG	0856, 1178, 1993
Magnavox	1454, 0802, 1198
Marantz	0855
Maxent	0762, 1211
Mintek	1603, 1990
Mitsubishi	1250
NetTV	0762
Norcent	1365, 1589, 1591
Norwood Micro	1286, 1296
Olevia	1144, 1240, 1331, 1610
Panasonic	0650, 1941
Petters	1523
Philips	1454, 1483
Polaroid	1262, 1276, 1316, 1341, 1498, 1523
Protron	1320, 1323
Proview	1401
RCA	0047, 1958
Sampo	0762
Samsung	0812, 0766, 0814, 1395, 1575
Sansui	1409
Sanyo	1142
Sceptre	0878, 1217, 1360, 1599
Sharp	0093, 0818, 1602
Sherwood	1399
Signet	1262
Sony	0810
Sova	1320
Soyo	1520
Superscan	0864
SVA	0587, 0870, 0871
Sylvania	0171, 1271
Symphonic	0171
Syntax	1144, 1240, 1331
Tatung	1286
Techview	0847
Toshiba	0845, 1343, 1635, 1656
Ultra	1323
US Logic	1286
Vidikron	1398
Viewsonic	0857, 0864, 0885, 1330, 1578, 1627
Visart	1336
Vizio	0864, 0885, 1756
Westing-house	0885, 0889, 0890, 1282, 1577
Wyse	1365
Zenith	1265

TV/VCR Combos

Controlled by the TV

America Action	0180
Audiovox	0180
Emerson	0236

Controlled by the VCR

America Action	0278
Audiovox	0278
Broksonic	0002, 0479, 1479
Citizen	1278
Colt	0072
Curtis Mathes	1035
Daewoo	0637, 1278
Emerson	0002, 0294, 0479, 0593, 1278, 1479
Funai	0000
GE	0240, 0807, 1035, 1060
GoldStar	1237
Harley Davidson	0000
Hitachi	0000
LG	1037
Lloyd's	0000
Magnasonic	0593, 1278
Magnavox	0000, 0593, 1781
Magnin	0240
Memorex	0162, 0454, 1037, 1162, 1237, 1262

MGA	0240
Mitsubishi	0807
Optimus	0162, 0454, 0593, 1162, 1262
Orion	0002, 0479, 1479
Panasonic	0162, 1035, 1162, 1262
Penney	0240, 1035, 1237
Quasar	0162, 1035, 1162
RadioShack	0000, 1037
RCA	0240, 0807, 1035, 1060
Samsung	1014
Sansui	0000, 0479, 1479
Sanyo	0240
Sears	0000, 1237
Sony	0000, 1232
Sylvania	1781
Symphonic	0000, 0593
Thomas	0000
Toshiba	0845, 1145
White Westing-house	0637
Zenith	0000, 0479, 0637, 1479

TV/VCR/DVD Combos

Controlled by the TV

Accurian	1803
Advent	1933
Akai	1935
Apex Digital	1943
Audiovox	1937, 1951, 1952
Axion	1937
Broksonic	1935
Cinego	1986
Diamond Vision	1997
Emerson	1963
ESA	1963
Funai	1963
Hitachi	1960
iLo	1990
Initial	1990
Insignia	1963, 2002
Jensen	1933
KLH	1962
LG	1993
Magnavox	1963
Mintek	1990
Panasonic	1941
Polaroid	1991
Prima	1933
RCA	1948, 1958, 2002
Samsung	1903
Sansui	1935
Sova	1952
Sylvania	1963
Toshiba	1635, 1935

Advent	1016
Akai	0695
Apex Digital	0830
Audiovox	1071, 1121, 1122
Axion	1071
Broksonic	0695

Diamond Vision	1609
Emerson	0821
ESA	0821
Funai	1334
Magnavox	0821
Panasonic	1362, 1462
Polaroid	1482
RCA	1132
Sharp	0630
Superscan	0821
Sylvania	0821
Symphonic	0821
Toshiba	1045

Controlled by the VCR

VCRs

ABS	1972
Admiral	1022, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0124, 0307, 0468

Akai	0041, 0049, 0053, 0061, 0106, 0175
-------------	------------------------------------

Alienware	1972
America Action	0278
American High	0035
Asha	0240
Audiovox	0037, 0278
Beaumark	0240
Bell & Howell	0104

Broksonic	0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479, 1479, 1815
------------------	--

Calix	0037
Canon	0035, 0102
Capehart	0020
Carver	0081
CCE	0072, 0278
Citizen	0037, 0278, 1278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271

Curtis Mathes	0060
----------------------	------