

entoneTM

Amulet

High Definition IP Television Receiver

User's Guide

P/N: 95-80xxxx-06

COPYRIGHT

©2009 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 2755 Campus Drive, Suite 235, San Mateo, CA 94403. U.S.A.

DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein.

Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

P/N: 95-80xxxx-06 JULY 2009

CUSTOMER SUPPORT AND CONTACT INFORMATION

For Customer Support please call: 650.572.7000






Customer Contact Information:




Entone, Inc.
2755 Campus Drive
Suite 235
San Mateo, CA 94403
U.S.A.
Tel: 650.572.7000
www.entone.com

Table of Contents

<i>Declaration of Conformity</i>	2
<i>Preface</i>	5
TYPOGRAPHICAL CONVENTIONS	5
OVERVIEW OF THIS USER'S GUIDE	5
1.1 Safety Precautions.....	6
IMPORTANT SAFETY INSTRUCTIONS.....	6
2.1 Index to Parts and Controls.....	8
CONTENTS IN THE BOX	8
FRONT PANEL AND REAR PANEL.....	9
REMOTE CONTROL.....	11
3.1 Amulet Introduction.....	12
ABOUT THE AMULET HIGH DEFINITION IP TELEVISION RECEIVER	12
4.1 Connecting the TV.....	13
CONNECTING THE TV USING COAXIAL CABLE	14
SETTING UP TV TO USE CATV.....	14
CONNECTING TV USING RCA COMPOSITE OR S-VIDEO.....	15
CONNECTING THE TV USING HDMI OR COMPONENT	16
5.1 Connecting Audio System.....	17
6.1 Connecting eSATA Hard Drive.....	18
7.1 Powering-Up Amulet.....	19
8.1 Remote Controls	21
LOADING BATTERIES	21
CONTROLLING THE AMULET USING IR	22
CONTROLLING YOUR TELEVISION AND OTHER AV DEVICES	22
9.1 Specifications	23
10.1 Troubleshooting the Amulet.....	25

Declaration of Conformity

	<p>To ensure proper use of this product, please read this manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service location.</p>
 	<p>WARNING: This symbol indicates the presence of uninsulated dangerous voltage within the product's enclosure that constitutes a risk of electric shock. Do not open the product's case.</p> <p>CAUTION: This symbol indicates you must take care; there is risk of damage to the equipment or to yourself.</p>
 	<p>To prevent fire or shock hazard, do not expose this product to rain or moisture. To reduce the risk of electric shock, DO NOT remove the cover or back. No user serviceable parts are inside. For servicing refer to qualified personnel.</p> <p>Declaration of Conformity (United States Only) This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and the receiver. • Connect the equipment to a different circuit from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

	<p>Part 68 - Compliance Registration</p> <p>This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. A label on the bottom of this equipment contains, among other information, the Ringer Equivalence Number (REN) and the product identifier. For products approved after July 23, 2001 the product identifier is in the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g. 03 is a REN of 0.3). The REN is used to determine the number of devices that may be connected to a telephone line. For earlier products, the REN is separately shown on the label. If requested, this number must be provided to the telephone company. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. This equipment is designed to connect to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant. An FCC compliant telephone cord and modular plug is provided with the equipment. If this terminal equipment causes harm to the telephone network, the telephone company may request you to disconnect the equipment until the problem is resolved. The telephone company will notify you in advance if temporary discontinuance of service is required. If advance notification is not practical, the telephone company will notify you as soon as possible. You will be advised of your right to file a complaint with the FCC if you believe such action is necessary. If you experience trouble with this equipment, do not try to repair the equipment yourself. The equipment cannot be repaired in the field. Contact your ISP for further instructions. The telephone company may make changes to their facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make the modifications necessary to maintain uninterrupted service. If your home has specially wired alarm equipment connected to the telephone line, ensure that the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. This equipment cannot be used on public coin phone service provided by the telephone company. Connection of this equipment to party line service is subject to state tariffs.</p>
	<p>Declaration of Conformity (Europe Only)</p> <p>This product is in conformity with the Council Directives:</p> <ul style="list-style-type: none"> • EMC Directive 89/336/EEC • Low voltage Directive 73/23/EEC
	<p>Entone products are designed and tested to meet IEC60065, the standard for the Safety of Information Technology Equipment. This is the international standard for these types of products to reduce the risk of product damage and of personal injury. The standard protects against the following hazards:</p> <ul style="list-style-type: none"> • Electric shock • Hazardous voltage levels • Fire — Overload, temperature, material flammability • Energy — Circuit with high energy or potential as burn hazards • Heat — Accessible part of the product at high temperatures • Radiation • Noise



Canada Certification Notice The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operations and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The department does not guarantee the equipment will operate to the user's satisfaction. This equipment meets the applicable Industry Canada Terminal Equipment Technical Specification. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. The Ringer Equivalence Number (REN) is 0.0. The Ringer Equivalence Number that is assigned to each piece of terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.0. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local Telecommunication Company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Connection to a party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information. If your home has specially wired alarm equipment connected to the telephone line, ensure that the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. If you experience trouble with this equipment, do not try to repair the equipment yourself. The equipment cannot be repaired in the field and must be returned to the manufacturer. Repairs to certified equipment should be coordinated by a representative, and designated by the supplier. Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal, metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Preface

TYPOGRAPHICAL CONVENTIONS

The following typographic conventions are used in this manual to provide visual clues as to the purpose or specific features of the IOM application.

- **Bold** text describes menu options and selections displayed on the screen.
- *Italics* emphasize statements and points to reference documentation.
- Ellipses (...) indicate truncated text for long examples depicting output that is too long to be shown in its entirety.
- **NOTE/TIP:** A note or a tip describes actions or conditions that can help you obtain optimum performance from IOM.
- **WARNING:** A caution or a warning describes conditions that can result in an error.
- **IMPORTANT:** An important note.

OVERVIEW OF THIS USER'S GUIDE

This User's Guide provides generic information about connecting Amulet to your audio and video equipments. Some of the topics covered in this guide are:

- Safety and regulatory information
- Setup
- Connecting Amulet to your audio and video equipment
- Connecting Amulet to the network
- Powering Amulet
- Using the Remote Controls
- Troubleshooting

For a full listing of all of the topics covered in this User's Guide, see the Table of Contents.

Chapter 1

1.1 Safety Precautions

Before installing Amulet, be sure to unplug Amulet, your TV and any other audio-video equipment you are using. This precaution will help to prevent danger of electrical shock and damage to Amulet and your equipment.

Be careful when moving your television to avoid accidental tipping or movements that might cause injury to you or those around you.

To ensure proper use of this product, please read this user manual carefully and retain for future reference. Should the unit require maintenance, contact your service provider.

IMPORTANT SAFETY INSTRUCTIONS






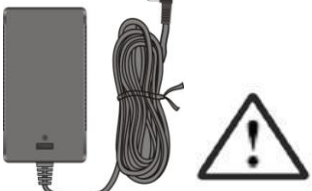


- **WARNING:** To prevent fire or shock hazard, do not expose this product to rain or moisture.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of electric shock, **DO NOT** remove cover or back. No user serviceable parts inside. Refer servicing to qualified personnel.
- To help prevent electric shock, plug the power cable into properly grounded sources. Use only properly grounded extension cords and adaptors, if they are needed.
- The AC main plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure nothing is lying on any of the cables.
- Be sure the cables are located where they will not be stepped on or tripped over.
- Do not spill food or liquids onto the unit.
- Do not push any objects into the free slots. Doing so will damage the unit, can cause fire or electrical shock, and can short out interior components.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block cooling vents.
- Do not place the equipment in a closed-in wall unit.
- When you disconnect a cable, pull on its connector or on its strain relief loop, not on the cable itself. Some cables have a connector with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cables.
- When you connect a cable, make sure both connectors are correctly oriented and aligned before connecting to avoid bending connector pins.
- For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

Chapter 2

2.1 Index to Parts and Controls

CONTENTS IN THE BOX

Item	Picture	Quantity
Amulet High Definition IP Television Receiver (Amulet HD)		1
RF Cable (Type-F connector) (1.8 m)		1
RJ45 Ethernet Cable (3m)		1
3 Color RCA A/V Cable (2m)		1
3 Color Component Cable (2m)		1
Power Supply with 1.8m power cord (100-240V, output 12V/4A)		1
Wireless Antenna (optional)		3
URC PLUS Remote Control (Universal Remote Control)		1
Battery (AA-size)		2

FRONT PANEL AND REAR PANEL

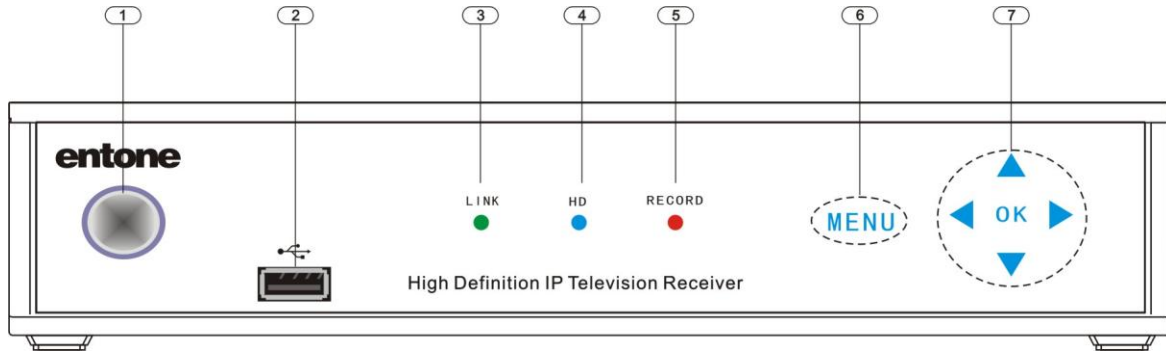 


Figure 2-1 Amulet Front Panel

Part Name	Description
1. POWER	If held for less than 5 seconds, turns the Amulet HD TV receiver ON/OFF. Lights blue when the receiver is turned on. If held for longer than 5 seconds, the Amulet HD TV receiver will be restarted.
2. USB	USB connector
3. LINK Indicator	Green when Ethernet connection is active
4. HD Indicator	Blue when the output resolution is HD (720p or higher)
5. RECORD Indicator	Red when PVR (Personal Video Recording) is recording
6. MENU	Display the User Menu
7. Arrow Keys and OK Button	OK Button for triggering remote registration mode Other usage according to middleware

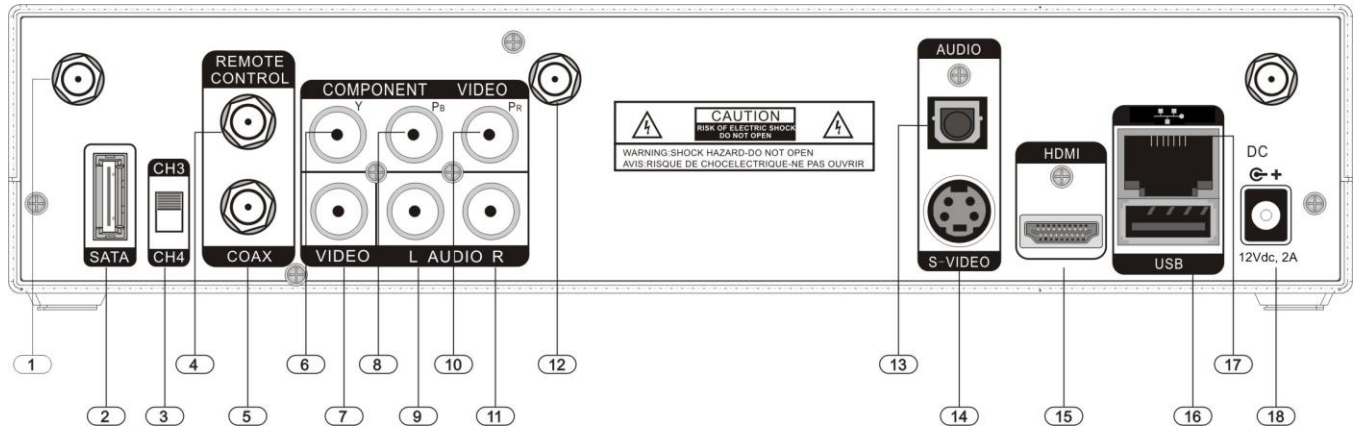 


Figure 2-2 Amulet Rear Panel

Part Name	Description
1. ANTENNA	Connector for wireless antenna (optional)
2. SATA	Connector for connecting external eSATA harddisk drive
3. CH4/CH3 Switch	Switch for toggling the RF TV default channel (either channel 3 or channel 4)
4. REMOTE CONTROL	RF Type-F connector for connecting the RF remote control antenna (optional)
5. COAX	RF Type-F connector for decoder
6. VIDEO Y	Component Video output (Y)
7. VIDEO	Composite video
8. VIDEO P _B	Component Video output (P _B)
9. AUDIO LEFT	Composite audio output (channel left)
10. VIDEO P _R	Component Video output (P _R)
11. AUDIO RIGHT	Composite audio output (channel right)

12. ANTENNA	Connector for wireless antenna (optional)
13. OPTICAL AUDIO	S/PDIF digital optical audio TOSLINK output
14. S-VIDEO	S-Video output
15. HDMI	HDMI output
16. USB	USB connector
17. ETHERNET	RJ45 plug for connecting to ADSL modem or network access equipment
18. DC	DC power jack

Chapter 3

3.1 Amulet Introduction

ABOUT THE AMULET HIGH DEFINITION IP TELEVISION RECEIVER

Amulet High Definition IP Television Receiver is one of Entone's line of cost-effective and compact high-definition Customer Premise Equipment (CPE) solutions. Amulet is a multi-functional IPTV receiver with MPEG-4 (AVC/H.264) HD capabilities that integrates easily with popular home-networking and broadband services. It also features an optional integrated personal video recorder (PVR). These robust features enable service providers to increase their subscriber base and generate more revenue by offering enhanced services.

Amulet's external hard drive option allows service providers to offer advanced services such as PVR without the hassles of installing new equipment. The optional PVR provides up to 400 hours of SD content or 200 hours of HD content. With Amulet, operators can now deliver more compelling services and an enhanced user experience to their subscribers.

With Amulet, subscribers can blend and connect a variety of traditional DSL broadband services (FTTP) with rich media services, and extend the capabilities of their existing IP home networks. Amulet supports a broad range of established home networking technologies such as HomePlug, HomePNA 3.0 and 802.11n to distribute video content throughout the home, including isolated locations. Amulet can also connect with a home computer for more content-delivery choices.

NOTE: HomePlug, HomePNA 3.0 and 802.11n are Amulet optional features.

Chapter 4

4.1 Connecting the TV

Amulet offers several options for connecting audio and video to popular TV and audio equipment.

You can connect Amulet to the primary TV using composite, component or HDMI connection. You may also connect the Amulet to TVs located in other rooms using coaxial cable connection. (RF remote controls can be ordered separately to control the Amulet from other rooms.)

If your TV supports 480p, 720p or 1080i pictures, use the HDMI or the component output jacks to connect to your TV. HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable. As a result, audio cables and video cables do not need to be connected separately. The HDMI output jack is fully compliant to HDMI 1.3 specifications.

HDMI and component video output support high definition video signal. They will provide the best quality video signal for HD ready TV sets.

CONNECTING THE TV USING COAXIAL CABLE

1. Use the coaxial cable that comes with Amulet to connect your TV's antenna input to the Amulet's "COAX" connector.
2. Tune your TV to channel 3 or channel 4 to view the output (depending on selection of the CH3/CH4 switch at the rear panel).

NOTE:

- In the RF TV, factory set to use channel 3 or channel 4.
- To set RF TV to another channel ID, You can change the channel ID by toggling the CH3/CH4 switch at the rear panel.

NOTE: The new channel ID will take effect immediately after the switch is toggled.

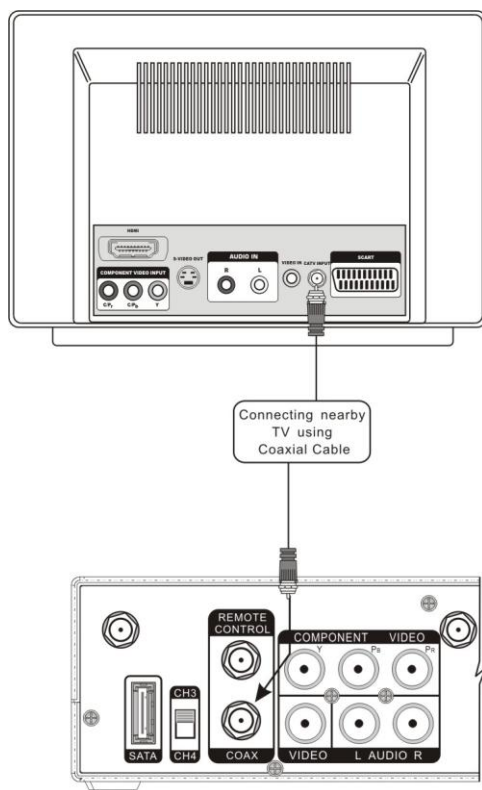 


Figure 4-1 Connecting TV using Coaxial Cable

SETTING UP TV TO USE CATV

In order for the Amulet to feed video signal to TV using RF TV, your TV must be configured to receive signal from CATV rather than from the antenna.

Most TVs use either a physical switch located on the rear of the TV or with on-screen programming to configure to use CATV. Consult your TV owner's manual for instruction if required.

CONNECTING TV USING RCA COMPOSITE OR S-VIDEO

1. Acquire the required cable. RCA cable comes packaged with the Amulet. S-Video cable is not packaged with the Amulet. Before purchasing the cable, consult your TV owner's manual to confirm that your TV supports the video signal output that you plan to use.
2. Connect the video and audio cables to the Amulet.
3. Connect the opposite end of the video and audio cables to the matching input in the TV.
4. Plug in your TV and turn on the power using your TV remote control. Use your TV remote control to select the respective video input that has connected to the Amulet. Consult your TV owner's manual for instructions as required.
5. Plug in your Amulet and turn on the power.
6. You should now see the output from the Amulet on your TV screen.

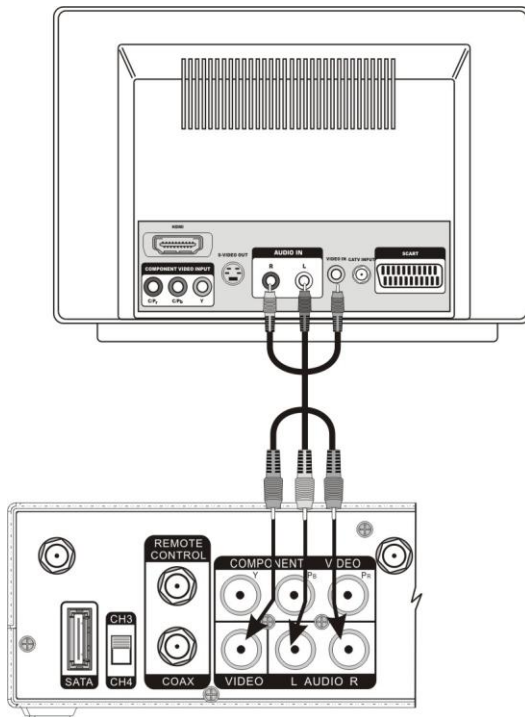 


Figure 4-7 Connecting TV using RCA Composite Video/Audio

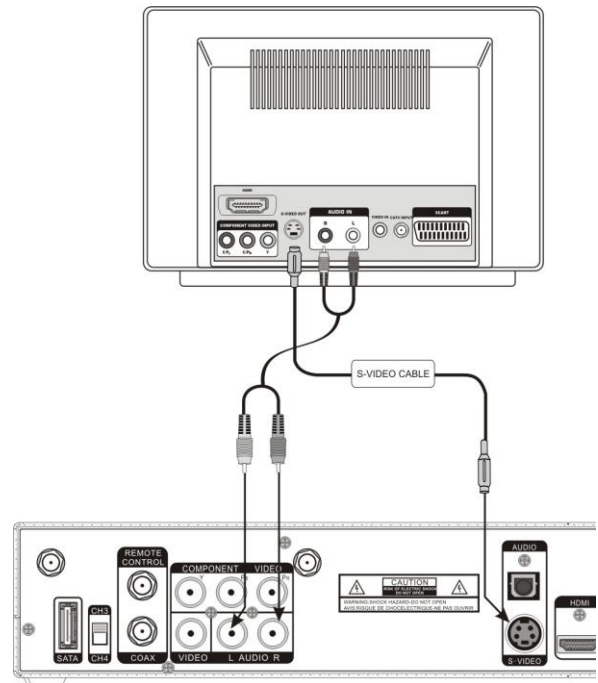 


Figure 4-8 Connecting Primary TV using S-Video and Composite Audio

CONNECTING THE TV USING HDMI OR COMPONENT

1. Acquire the required cable. Component cable comes packaged with the Amulet. HDMI cable is not packaged with the Amulet. Before purchasing the cable, consult your TV owner's manual to confirm that your TV supports the video signal output that you plan to use.
2. Connect the video and audio cables to the Amulet. (HDMI does not require separate audio cable connection.)
3. Connect the opposite end of the video and audio cables to the matching input in the TV.
4. Plug in your TV and turn on the power using your TV remote control. Use your TV remote control to select the respective video input that has connected to the Amulet. Consult your TV owner's manual for instructions as required.
5. Plug in your Amulet and turn on the power.
6. You should now see the output from the Amulet on your TV screen.

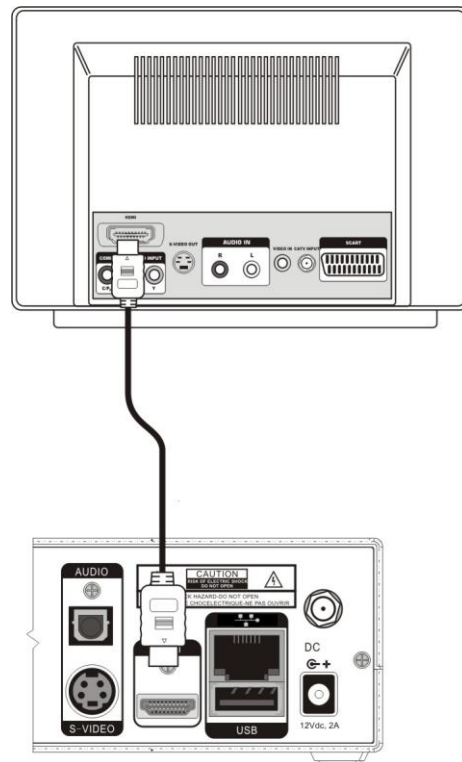 
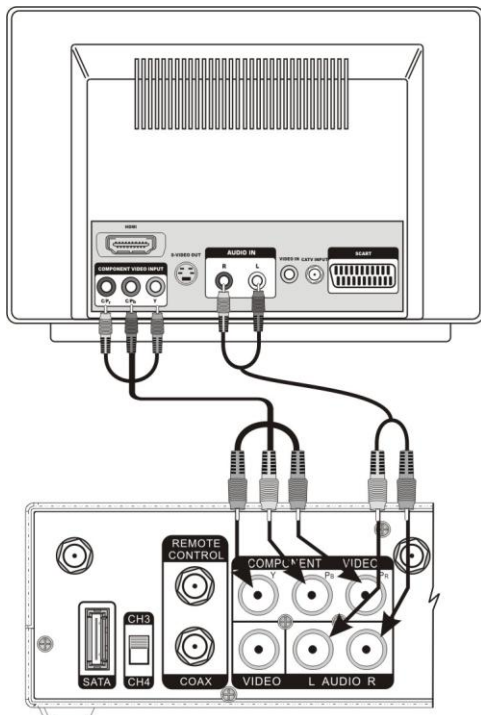 


Figure 4-9 Connecting TV using Component and Composite Audio Figure 4-10 Connecting TV using HDMI

NOTE:

- When the HDMI connection cannot be verified by your TV, disconnect the HDMI cable and then connect it again, or turn off the TV and then turn it on again.
- Analog DVI is not supported. If your TV supports digital DVI but not HDMI, you can use an HDMI to DVI convector cable or adaptor to connect the Amulet HDMI to the TV DVI. In this case, you need to connect the audio cable separately.
- Be sure to use an HDMI cable with the HDMI logo.
- If your TV does not support multi-channel audio, the Amulet will output PCM audio only.
- Please refer to the next section to set the Component and HDMI output resolution.

Chapter 5

5.1 Connecting Audio System

Your Amulet supports AC-3 (Dolby Digital 5.1 channel). To enjoy multi-channel surround-sound, the content source must carry multi-channel AC-3 signal. Please refer to your service provider for availability of AC-3 5.1 programs.

You can enjoy multi-channel surround-sound such as 5.1 channels by connecting the Amulet to an amplifier compatible with Dolby Digital. You can connect to your amplifier using the digital optical audio output.

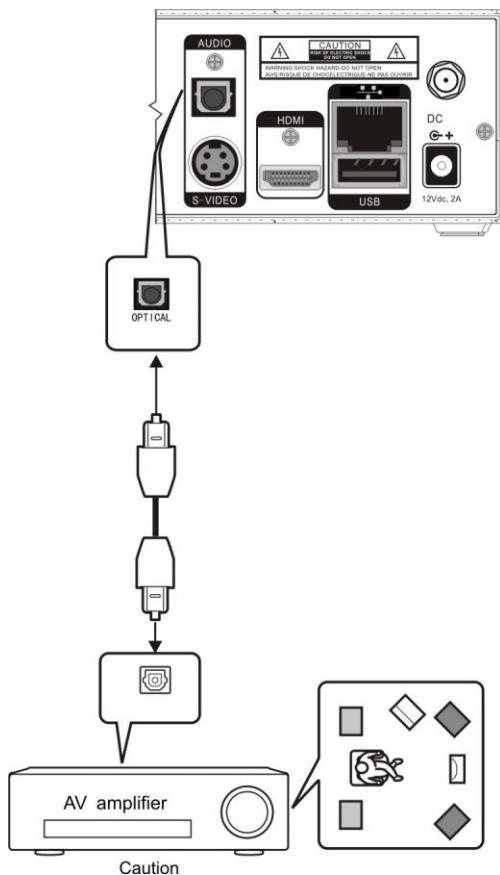 


Figure 5-1 Connecting Amulet to Audio System

Consult your audio system user guide for connection. Take necessary precautions when working with electric equipment. Remove the devices from wall power and be sure to use caution when moving equipment to prevent injury.

If your connected TV or AV equipment does not support AC-3, you can disable AC-3.

Enabling or disabling AC-3 is controlled by the IPTV middleware. For details of enabling and disabling AC-3, please refer to usage instruction provided by your service operator.

Chapter 6

6.1 Connecting eSATA Hard Drive

Amulet supports DVR (Digital Video Recording) and PLTV (Pause Live TV) by using eSATA (External Serial Advanced Technology Attachment) hard disk drive. This section applies when you need to install an external eSATA hard drive.

DVR allows you to record live or scheduled channel programs into the hard drive and view those recorded programs as VOD at later times. PLTV allows you to pause and fast track live programs. For details of DVR and PLTV service availability and operation usage, please refer to your network and TV service provider.

eSATA hard drive is an optional item. eSATA is an external interface for SATA technologies. The SATA interface is more streamlined than ATA and provides serial architecture for greater speed than the older parallel technology.

To get ready your Amulet to enable DVR and PLTV service:

1. Connect the external hard drive using eSATA cable.
2. The eSATA hard drive requires separate power supply. Connect the eSATA hard drive power supply to the power source.

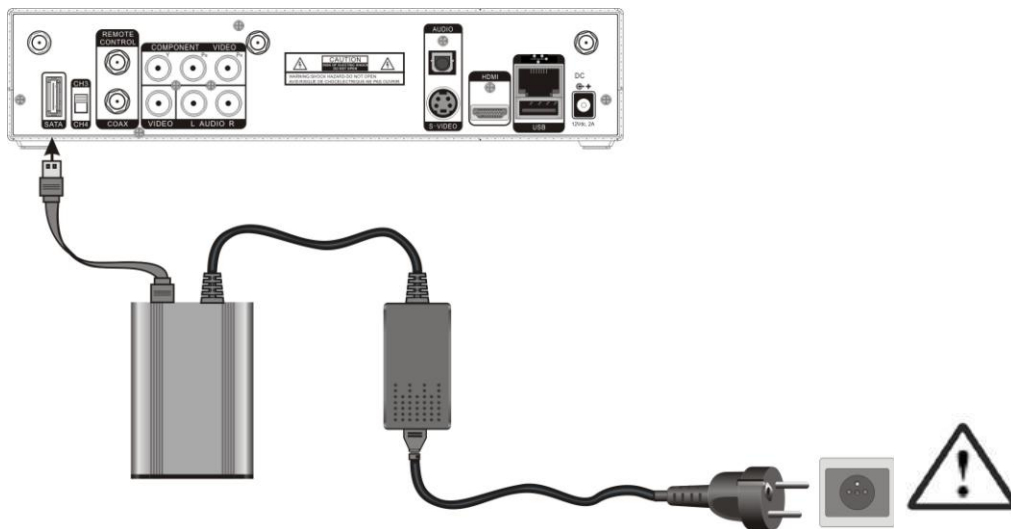 


Figure 6-1 Connecting eSATA hard drive

Chapter 7

7.1 Powering-Up Amulet

Follow these steps to power up the Amulet:

1. Follow your TV/Network service provider's instruction to connect the Amulet to your network modem or network access unit using the Ethernet cable or Wireless Antennae (optional)

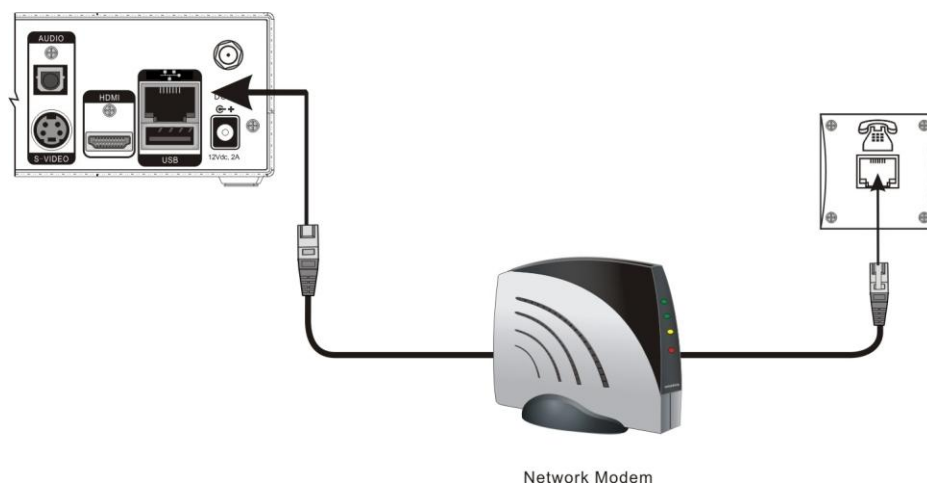 


Figure 7-1 Connecting Amulet (Ethernet connection)

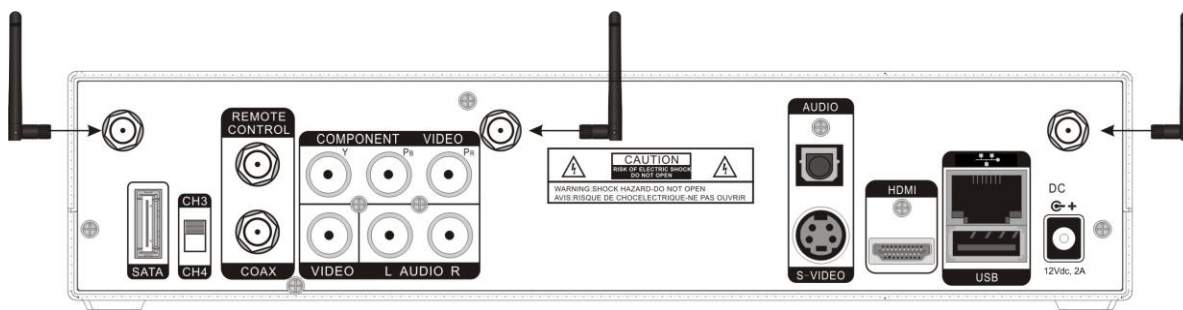 


Figure 7-2 Connecting Amulet (Wireless connection)

2. Plug the socket end of the AC/DC adapter into the wall socket and the DC jack into the power connector on the Amulet.
3. The Amulet front panel power indicator will illuminate in blue color.
4. The "LINK" LED indicator will illuminate in green color

NOTE: The "HD" LED indicator will illuminate only if the output resolution is 720p or higher. The "RECORD" LED indicator will illuminate only if the (PVR) is enabled and recording assets to the hard disk drive is in progress. (Please refer to your middleware or service provider about the PVR functionality)



Figure 7-3 Amulet Starting

5. Within 60 seconds splash screen will appear on the TV.



Figure 7-4 Amulet Boot-up Splash Screen

6. The total boot-up time may vary depending on the middleware application and the service provider environment.

Chapter 8

8.1 Remote Controls

LOADING BATTERIES

The remote control comes with AA-size batteries, which needs to be installed when you first receive your system. When you replace old batteries, you should replace all of the batteries. Use batteries of the same kind, for example alkaline or carbon zinc, and do not mix batteries of different kinds. Alkaline batteries last longer than carbon zinc.

WARNING: Mixing old and new batteries or different types of batteries poses a fire hazard.

To load batteries to remote control:

1. Press down on the battery cover's top latch and slide the cover off.
2. If you are changing out batteries, take out all of the old batteries.
3. Put the new batteries in. Make sure you match the plus ("+") ends with the plus markings on the battery case.
4. Slide the cover back into place.

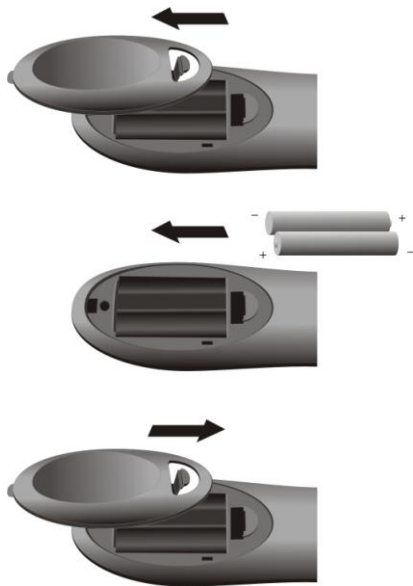 


Figure 8-1 Loading Batteries to Remote Control

CONTROLLING THE AMULET USING IR

Amulet uses InfraRed (IR) to receive remote control signals. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the remote control to the Amulet, with no objects blocking the line of sight.

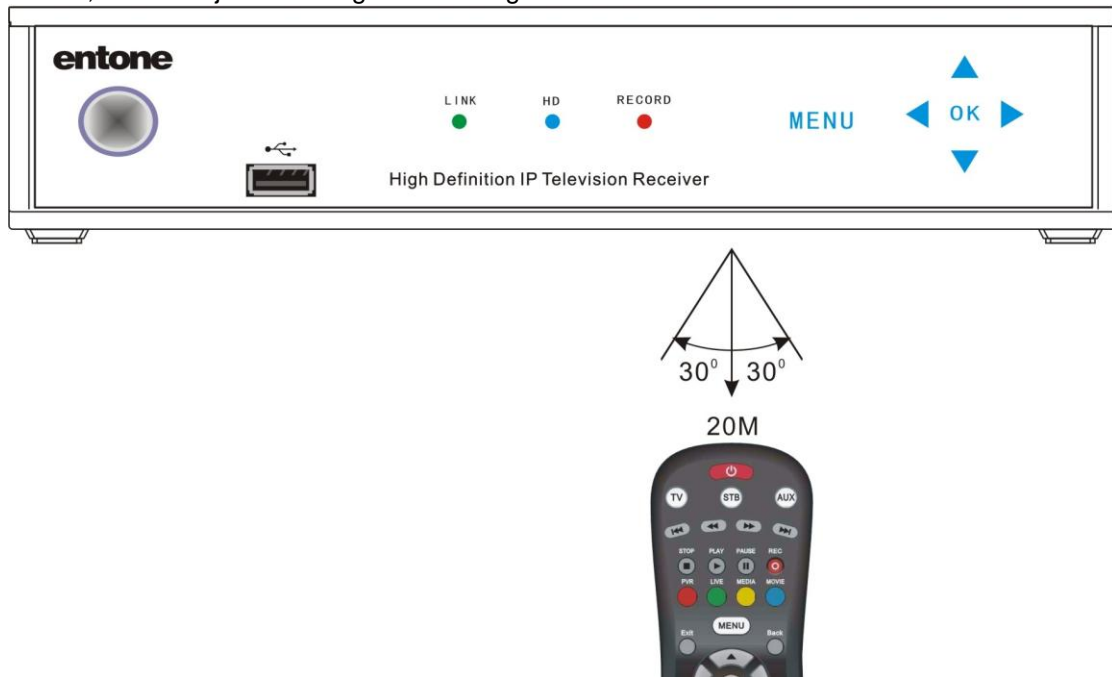 


Figure 8-2 IR Reception Range

CONTROLLING YOUR TELEVISION AND OTHER A/V DEVICES

The Amulet remote controls can also be used to control TVs and other A/V devices such as DVD players and recorders. The remote controls use infrared (IR) light signals to control other devices that the remote is programmed to control. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the remote control directly at these devices, with no objects blocking the line of sight.

For details of how to program the Amulet remote controls and the supported devices, please refer to the *Amulet Quick Reference Guide* or *URC PLUS User's Guide*.

Chapter 9

9.1 Specifications

Main components	
Decoder	Single decoder
Main CPU	MIPS 4380 class with FPU
Memory	512MB, 1GB NAND Flash
Software	Real-time, multi-threaded embedded OS, Java Virtual Machine with MHP APIs, HTML 4.01 compliant browser with JavaScript 1.5
Universal Remote Control	IR carrier frequency is 36KHz using RC6 protocol
Graphics	
Color	True-color OSD support (up to 1920x1080 pixels) Programmable OSD scaler, flicker filter Alpha blending over video Picture in graphics with scaling 2-D graphic accelerator
Audio and video	
Video Input Formats	High profile up to level 4.1 H.264/AVC streams High or main profile level 3.1 H.264/AVC streams VC-1 SP/MP and AP @ level 3 HD MPEG-2 4:2:0 SD MPEG-2 4:2:0 Still picture decode MPEG4 P2 SP/ASP L5 SD Progressive/Interlaced DivX 3.11, 4.1, 5.x progressive and interlaced AVS1-P2 Jizhun profile level 6.0
Video Output Formats	NTSC-M, NTSC-J 480i/480p/720p/1080i output formats Component RGB or YPrPb Output Macrovision 7.1 HDMI with HDCP 1.2 S-video and composite
Audio Input Formats	AAC LC, AAC LC+SBR Level 2, AAC+ Level 2, AAC+ Level 4 Dolby Digital, Dolby Digital Plus MPEG I Layer 1, 2, 3 (MP3) Windows Media Audio (WMA) WMA pro AAC HE 5.1 decode plus DTS 5.1 encode SPDIF output AAC HE 5.1 decode plus AC3 5.1 encode SPDIF output
Audio Output Formats	S/PIDF output supports Dolby Digital, AAC, MPEG and DTS pass-through, 24-bit PCM Dolby Digital, AAC down mixed to 2 channel PCM analog stereo MPEG (ISO/IEC-11172-3) down mixed to 2 channel PCM analog stereo
Closed Captioning	EIA-608 Captioning format – ATSC, SCTE
Connectors	1 x RF TV type-F connector for 1 modulated channel

	1 x RCA composite video output 1 x RCA composite audio output 1 x S-Video output 1 x YpbPr Component output 1 x HDMI (HDMI 1.3) 1 x S/PDIF digital optical audio TOSLINK output
Tuner	None
Network interfaces	
Ethernet	Ethernet (10/100Base-T auto-sensing)
Home networking	Optional HPNA 3.0 (Telephone wire / Coaxial Cable) Optional 802.11n wireless
Physical and mechanical	
Dimensions	160mm x 250mm x 50mm (W x L x H)
Weight	1 kg
Operating voltage	100-240V AC RMS
Operating current	0.6A
Operating frequency	50/60Hz
Output voltage, current	12V DC, 2A
Operating temperature	10° to 35° C (50° to 95° F)
Relative Humidity	Humidity non-condensing
Regulatory compliance	UL/cUL, CE (pending), FCC part 15, FCC part 68
Security controls	
Anti-Taping	Macrovision (optional)
Parental Controls	Provided through middleware partner integration

NOTE: Above specification for reference only.

Chapter 10

10.1 Troubleshooting the Amulet

This section describes some of the most common problems that might be encountered when installing Amulet, and the solutions to those problems.

Symptom	Remedy	Reference
Remote controls do not work	<ul style="list-style-type: none"> • Check batteries are correctly loaded. • Check that new URC PLUS remote control is used. • Check remote control is programmed to IR mode. In case of doubt, program the remote control again. 	<i>Section 8 – Remote Controls</i>
Remote controls cannot control the programmed devices	<ul style="list-style-type: none"> • Device manufacturers may change their device codes or no device code can be found in the Universal Remote Control User's Guide. Try searching the device code according to the procedures listed in the Universal Remote Control User's Guide. 	<i>Amulet Quick Reference Guide URC PLUS User's Guide</i>
Standby indicator at the front panel not lit	<p>The power supply to the box is probably not working:</p> <ul style="list-style-type: none"> • Check that the AC/DC adapter is connected properly to the DC INPUT connector. • Check that there is power from the power source. • Make sure you have pressed the Standby button at the top of the box and that the Standby / On light is green. 	<i>Section 7 – Powering up Amulet</i>
Standby indicator on the front panel stays orange for more than 60 seconds	<ul style="list-style-type: none"> • Check that the ADSL cable is properly connected between the ADSL connector and the ADSL modem. The ADSL Link indicator should be orange and steady. • Check that the ADSL modem is properly connected to the telephone socket. 	<i>Section 7 – Powering up Amulet</i>
Standby indicator turns green; no picture on the TV	<ul style="list-style-type: none"> • Check that the video output connector of the Amulet is properly connected to the input connector of the primary TV. • "RF TV" (coaxial connection): the TV set should be set to channel 3/4. • Composite, Component or HDMI connection: the TV set should be set to the correct input mode for the signal. • Component or HDMI connection: the resolution selected in Amulet is supported by your TV. 	<i>Section 4 – Connecting the TV</i>
No sound	<ul style="list-style-type: none"> • Check that the audio cable is connected to the correct input in your device. • Is the volume of the device turned down to 	<i>Section 5 – Connecting to Audio System</i>

	<p>the minimum level?</p> <ul style="list-style-type: none"> • If HDMI or component is used. Try disabling AC-3. • If HDMI is used, check the resolution and try to use the composite audio output. 	
Multi-channel sound not working	<ul style="list-style-type: none"> • Check with service provider that programs contain multi-channel AC-3 signal. • Check that AC-3 is enabled in the Amulet. • Check your TV or A/V equipment for AC-3 multi-channel setup. 	<i>Section 5 – Connecting to Audio System</i>
No sound, poor sound or popping noise on HDMI	<ul style="list-style-type: none"> • HDMI is an evolving technology, so it is possible that some TVs may not operate properly with Amulet. In case of problem, use component video output and composite audio output to connect your primary TV. 	<i>Section 4 – Connecting the TV</i>

